

SIRONA HEMLOCK INFRARED SAUNA OWNER'S MANUAL



SA70083-Person with 8 Carbon Heaters



SA70094-Person with 9 Carbon Heaters

Please Do Not Hesitate to Contact Our Consumer Hotline at 800-759-0977 with Any Questions That May Arise During Assembly or Use of This Product!

Ver. 6/20 SA7008/SA7009

TABLE OF CONTENTS

ASSEMBLY TIPS & WARNINGS	3
PARTS IDENTIFIER	4
ASSEMBLY INSTRUCTIONS	5-9
OPERATION INSTRUCTIONS	10
ENJOYING YOUR SAUNA	11
HEALTH & SAFETY WARNINGS	12
CLEANING & MAINTANENCE	13
TROUBLESHOOTING GUIDE	13-14
SAUNA USE DISCLAIMER	14
REPLACEMENT PARTS	15-16
WARRANTY INFORMATION	17

If you would like a French version of this manual, please contact our Customer Service Department at 800-759-0977 or custserv@splashnetxpress.com

Si vous voulez une version française d'un manuel, s'il vous plaît contacter notre service à la clientèle au 800-759-0977 ou custserv@splashnetxpress.com

ASSEMBLY TIPS & WARNINGS

- Before you begin, read all assembly instructions and safety warnings carefully.
- This sauna requires at least 2 adults to complete assembly.



- Remove all of the contents from boxes and verify that you have all of the parts shown on the Parts Identifier before you begin assembly. *Note: Some parts may be pre-installed or pre-assembled.*
- This manual is used for the assembly of several sauna models; therefore, some figures or drawings may not look exactly like your product.
- Cover the sauna floor during assembly to avoid staining the unfinished wood surface.
- Retain this Owner's Manual for future reference.

ELECTRICAL REQUIREMENTS


- We recommend consulting a licensed electrician and checking local ordinances before installing ANY sauna.
- These saunas require a 20 amp receptacle and a 20 amp circuit breaker. *Note: Electrical modi-fications may be required to accommodate 20 amp power.*
- Refer to the serial plate on the back of the sauna for complete electrical specifications.
- These saunas requires a dedicated circuit No other appliances should share the same outlet with the sauna.

CHOOSING A LOCATION

- This sauna should only be placed INDOORS on a dry, level surface.
- There should be a minimum of 5 inches clearance between the sauna and any wall.
- Make sure the main power cord will reach the outlet and remains easy to access.
- The sauna should only be used in a dry location as moisture will damage the wood and electrical components.
- Keep the sauna away from any potential hazards including water sources, flammable objects and combustible materials.

PARTS IDENTIFIER (NOT TO SCALE)

Illustrations Not to Scale

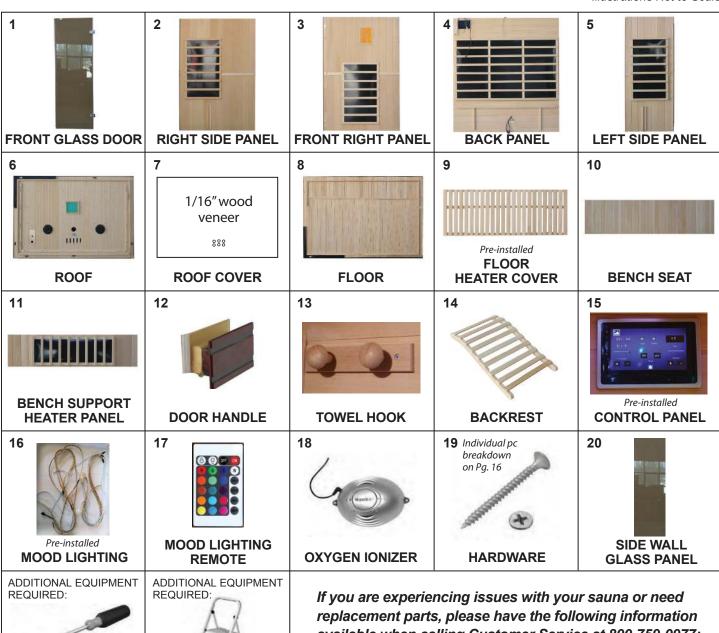

available when calling Customer Service at 800-759-0977:

- Date & Proof of Purchase Model/SKU number
- Image of the metal plate mounted on back of sauna by plug
- Quality images of issue/concern (preferabbly in PDF format)
- · Clear description of the issue

The parts identified above, unless otherwise indicated, are the main components used for assembly. Other pre-assembled parts are listed on PAGE 15 & 16.

Refer to REPLACEMENT PARTS (PAGES 15 & 16) to determine the correct part number when ordering replacements.

PHILLIPS HEAD

SCREWDRIVER

STEP LADDER

ASSEMBLY INSTRUCTIONS

1. Begin assembly by determining an appropriate location for your sauna – see ASSEMBLY TIPS & WARNINGS for details. Place the FLOOR PANEL on the floor in this location.



NOTE: On your model the FLOOR HEATER is now pre-installed in the floor (NOT SHOWN).

2. Place the RIGHT SIDE WALL PANEL on the FLOOR PANEL, lining up the SIDE PANEL against the floor trim piece on the backside of the FLOOR.




3. Place the FRONT RIGHT WALL PANEL on the FLOOR in the same manner and insert the INNER WALL CONNECTORS on the side into the three corresponding holes on the RIGHT SIDE PANEL, then push down to lock panels together.



4. Place the BACK WALL PANEL on the FLOOR against the floor trim, as shown, and make sure it fits snugly against the RIGHT SIDE WALL PANEL with trim overlapping wall, then engage buckles from bottom to top.



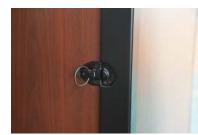

Place ring over knob and snap buckle closed



5. Place the LEFT SIDE WALL PANEL on the FLOOR in the same manner and buckle it to the BACK WALL PANEL.

The LEFT SIDE WALL has a glass panel that will need to be installed next to it and attached to FLOOR and ROOF in Steps 11A and 11B.



6. Install the BENCH SUPPORT HEATER PANEL between side walls by sliding into two trim pieces on each wall.

NOTE: There will be a notch on top of the BENCH SUPPORT for white MOOD LIGHTING wire, so it doesn't get pinched. Make sure wire goes in notch.

TIP: Move front of LEFT SIDE WALL out a little to make it easier to get BENCH SUPPORT HEATER PANEL and BENCH SEAT (Step 9) in place. Put back in place once bench is in.






7. Connect the black floor heater plug and bench heater plug snuggly into the black plugs from BACK WALL PANEL.






8. Connect the white MOOD LIGHTING bench plugs together. Make sure they click together tightly. Then place the BENCH SEAT with bottom back wood strip over board on BACK WALL PANEL. Use two 2" (50 mm) SCREWS to attach bench through pre-drilled holes.



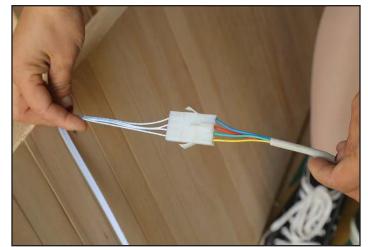

9. Lift the ROOF above the sauna and place on top of walls, feeding the control panel and heater cables through the corresponding holes. Align METAL PINS on top of FRONT RIGHT WALL PANEL and LEFT SIDE WALL with holes in ROOF (see below) to get ROOF positioned properly.

Front Right Wall

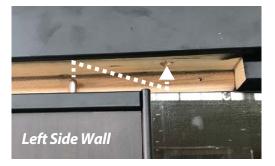

10A. Once ROOF is in place, use two 1-1/2" (40mm) SCREWS to secure roof to back wall in marked holes as shown below.





10B. Secure the ROOF and FLOOR, from interior, with four 1-1/2"

(40mm) SCREWS *using pre-drilled holes located inside*, two at top and two at bottom *(hole locations are indicated by arrows below)*. Make sure walls are tight against ROOF and FLOOR when attaching. This step is **VERY IMPORTANT** to insure walls are stable and glass panel and door will properly align.







11A. Slide the SIDE WALL GLASS into the slot on LEFT SIDE WALL and FLOOR. Attach to FLOOR using one 3/4" (20mm) SCREW and BLACK PLASTIC WASHER through glass.

11B. Attach the SIDE WALL GLASS to ROOF using one 3/4" (20mm) SCREW and BLACK PLASTIC WASHER through glass. Snap METAL CAPS onto two plastic washers just installed. Attach the GLASS DOOR HINGES to frame using six 1" (25mm) SCREWS. Use pre-drilled holes in frame, so door aligns properly.





TIP: Attaching door handle (shown in Step 13) now, before hanging door, will give you something to hold onto while aligning hinge holes. It also helps to have two people doing this step, one holding door and one inserting screws. Placing a correct height shim under glass door will help to keep it at right height while attaching.

12. Connect the heater cable plugs, control panel wires, and mood lighting on the roof to the corresponding wire connections coming up through walls and control panel roof hole. Make sure all wires are mated and connected tightly.
















12B. Feed the main power cable through hole in ROOF and plug securely into receptacle on back of POWER SUPPLY box. Place the ROOF COVER on top of ROOF and secure with 12-14 3/4" (20mm) SCREWS.

13. Attach the DOOR HANDLE to the GLASS DOOR by assembling together using two 1-1/2" (40mm) SCREWS as shown.



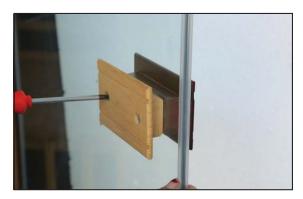

14. Remove the back cover of the OXYGEN IONIZER by turning it as indicated. Unwrap and install the fragrance patch, then reattach the back cover. Attach the OXYGEN IONIZER in the designated position with two 5/8" (16mm) SCREWS. Plug the power cable into the OXYGEN IONIZER as shown.






- 15. Attach the DOUBLE TOWEL HOOK with two 5/8" (16mm) SCREWS. *Note: attaching hook is optional, but if you do, consider the position carefully before driving any screws into the sauna interior.*
- 16. Plug the main power cable into a dedicated outlet.

Note: No other appliances should share the same electrical outlet or circuit with this sauna.

Please review the Operation Instructions and Health & Safety warnings before using your sauna.

OPERATION INSTRUCTIONS

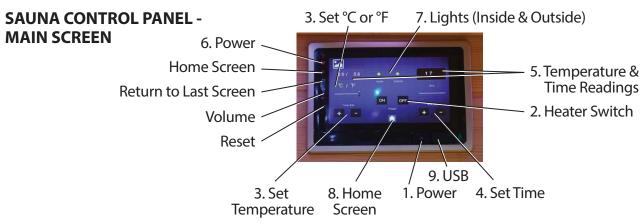

- 1. Press POWER (bottom right button) to turn ON Control Panel. This will open Main Screen.
- 2. Press center Heater Switch to turn Sauna Heater Panels ON or OFF.
- 3. Select °C or °F and set the desired TEMPERATURE with the (+) and (-) buttons.
- 4. Set the desired TIME with the (+) and (-) buttons.
- 5. When the TIME reaches 00, the heaters will turn OFF automatically.
- 6. After your sauna session, press POWER (top left on screen) to turn OFF the sauna.
- 7. Press INSIDE or OUTSIDE to turn ON or OFF the corresponding light.
- 8. Use HOME button to get to SECOND SCREEN for music and color therapy light controls.

SECONDARY SCREEN - Use button to select function

 
COLOR THERAPY CONTROL PANEL

(use LED COLOR button to reach controls)

- 1. Press ON or OFF in top white bar.
- 2. Press cycled color, or individual color desired, using color buttons.
- 3. Use dimer switch to control brightness.
- 4. Cycle switch can be used to go through colors and select.

 3. Dimer Switch





TUNER - Use buttons to select AM and FM radio signal (FM1, FM2, FM3, AM1 or AM2), scroll through channels (<>), or auto seek (AMS). Channels can be saved in P1- P6.

BLUETOOTH - Use touch controls to select and play music once connected to source.

9. **USB** - Can be used with thumb drive *only*. Will **NOT** activate with any other input. Best to use Bluetooth for music.

CALENDAR - Use arrow buttons on right side of screen to set date and time, then press SAVE.

INTERIOR MOOD LIGHTING (this is NOT Color Therapy Light, see above)

1. Use the remote control to make adjustments to interior light color and intensity.

STAR LIGHTS (this is NOT Color Therapy Light, see above)

1. Press larger black button on roof control to power on,

 
OXYGEN IONIZER

adjust with smaller black button.



2. Press O3 to disinfect the air with ozone.





ENJOYING YOUR SAUNA

- 1. Prior to initial use, wipe down all interior surfaces of the sauna with a damp cloth.
- 2. Turn on the sauna and set temperature to 104° F for one hour to burn off any factory dust.
- 3. Always drink plenty of water before, during and after your sauna session to stay properly hydrated.
- 4. A normal sauna session should last 30 minutes or less.
- 5. Allow approximately 15 to 25 minutes for the sauna to warm up before entering.
- 6. Perspiration will begin within 15 to 25 minutes after entering the sauna.
- 7. Limit the use of lotions or oils on your body while using your sauna. These products can block your pores and limit perspiration, decreasing the effectiveness of your sauna session.
- 8. For spot treatment of a particular area, position that body part closer to the heater, allowing for deeper heating in that area.
- 9. During your sauna session, place towels on the bench seats and on the floor to absorb perspiration and maintain the cleanliness of your sauna.
- 10. Towel off excess perspiration during your sauna session to help your body perspire more freely.
- 11. Open the ceiling vent or the front door to allow fresh air into your sauna.
- 12. Allow your body to cool down following your sauna session, then rinse the perspiration off your body in a warm shower.

HEALTH & SAFETY WARNINGS

- 1. Review all instructions and warnings before operating your sauna. A sauna is not a toy. Serious injury may result from negligence, intentional misuse and failure to follow safety instructions.
- 2. Hyperthermia Danger: Hyperthermia occurs when the body absorbs more heat than it can dissipate. When the elevated body temperatures are sufficiently high, hyperthermia is a medical emergency and requires immediate treatment to prevent disability or death. It is very important not to allow your body's core temperature to rise above 103° F. Symptoms of hyperthermia include dizziness, lethargy, drowsiness and fainting. The effects of hyperthermia may include failure to perceive heat, failure to recognize the need to exit the sauna, unawareness of the impending health hazard, physical inability to exit the sauna and unconsciousness.
- 3. If you are feeling uncomfortable, faint or dizzy, exit the sauna immediately.
- 4. Do not exceed recommended time and temperature guidelines.
- 5. Do not touch or interfere with the temperature sensor on the control panel.
- 6. Do not touch or spray water on the heater elements.
- 7. Do not use the sauna while under the influence of drugs or alcohol.
- 8. Do not sleep inside the sauna.
- 9. Do not use the sauna immediately following strenuous exercise. Allow your body to cool down for 30 minutes before entering the sauna.
- 10. Pets should never be placed in the sauna.
- 11. Pregnant women, children under the age of 6, the elderly and infirm should not use the sauna.
- 12. Children over the age of 6 should always be supervised by an adult.
- 13. People with health problems including open wounds, fever, sunburn or dehydration should not use the sauna.
- 14. People suffering from obesity or with a history of heart disease, low or high blood pressure, circulatory system problems or diabetes should consult a physician before using the sauna.
- 15. Consult a physician before using the sauna if you take any prescription medications.
- 16. Keep towels and combustible materials away from the heater elements.
- 17. Remove all towels and materials after your sauna session.
- 18. Never leave your sauna unattended while in use.
- 19. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
- 20. Always turn off and unplug the sauna when not in use.

CLEANING & MAINTENANCE

- 1. Always unplug the sauna and allow it to cool down before performing any cleaning or maintenance.
- 2. Use furniture polish or furniture oil when cleaning the sauna exterior.
- 3. The sauna interior surfaces should only be wiped down with a damp cloth. Do NOT use chemicals, abrasive cleaners or solvents on the unfinished interior wood.
- 4. As with all natural wood products, variations in the color and the grain as well as irregularities such as knots and fine cracks may be present. These characteristics are a part of the natural beauty of the wood and should not be considered defective.

TROUBLESHOOTING GUIDE

WARNING!

Solution

Solution

Solution

- Always unplug the sauna and allow it to cool down before performing any maintenance.
- Repairs to the electrical components of the sauna should only be performed by a qualified service technician.
- Unauthorized repairs or alterations will void the manufacturer's warranty.

Problem THERE IS NO POWER TO THE SAUNA

1. Check that the Main Power Cable is plugged into the wall outlet.

2. Check that the circuit breaker for the outlet has not tripped. If the breaker has tripped, check that the amperage of the breaker is appropriate for your sauna.

- 3. Check all connections to the Power Supply Box.
 - 4. Check for damage to the Main Power Cable; replace, if necessary.
 - 5. Replace the Power Supply Box, if necessary.



Problem ONE HEATER DOES NOT WORK

1. Check that all the connections are tight.

2. Replace the Heater Element.

Problem NONE OF THE HEATERS WORK

1. Check that all connections are tight.

2. Replace the Heater Circuit Board, if necessary.



TROUBLESHOOTING GUIDE (CONT.)

Problem THE CONTROL PANEL DOES NOT WORK

1. Check that all the connections are tight.

Solution

- 2. If the numbers are scrambled or the buttons are unresponsive, replace the Control Panel.
- 3. If the temperature indicator does not work or reads "--" or "EP", replace the Control Panel.



Problem THE LIGHTS ARE NOT WORKING

1. Check that all the connections are tight.

Solution

- 2. If one light does not work, replace the light fixture. *Note: Do not touch the glass part of bulb with your fingers during installation.*
- 3. If neither the lights nor the radio are working, replace the Power Supply Box.

Problem THE SPEAKERS ARE NOT WORKING

- 1. Check that the volume is not turned all the way down and that the fader control is set correctly.
- 2. If only one speaker is working, check to see that the sound balance on the stereo is not set all the way to one side.

Solution

- 3. Check that all the connections are tight.
- 4. Replace the speaker, if necessary.

Problem THE COLOR THERAPY LIGHTS ARE NOT WORKING

Solution

- 1. Check that all the connections are tight.
- 2. Replace the Color Therapy Light or Control Panel, if necessary.

REPLACEMENT PARTS

The following page list part numbers specific to your particular sauna model. In the event that you need replacement parts, use this guide to reference the part number. It is important to use only replacement parts specified by the manufacturer. The use of unauthorized substitutes may damage your sauna or cause electrical hazards resulting in injury or fire, and will void the warranty.

SAUNA USE DISCLAIMER

Always consult a health care provider who is knowledgeable in sauna use before using a sauna.

Saunas are powerful devices and monitoring your progress by a professional trained in sauna use is always advisable. Variables of sauna therapy such as health condition of user, duration of sauna therapy, proper hydration, electrolyte and mineral balance and restoration must be properly considered and heeded before proceeding with sauna therapy.

Blue Wave products are not registered with the United States Food and Drug Administration (FDA) as a Medical Devices. Consult your licensed health care provider to see if our saunas are right for you. Blue Wave products and/or its partners, associates, etc. are not liable for the use of Blue Wave products nor any incidental or consequential damages. Under no circumstances shall Blue Wave products or any of its representatives be held liable for injury to any persons or damage to any property. Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

The FDA requires us to inform you that this product is not intended to diagnose or treat any disease or medical problem and is not a substitute for regular medical care from a licensed health care provider.

NOTE: This manual covers assembly of two different sauna models. Please make sure you are looking at the Parts List (pages 15 & 16) for your particular model, if you need replacement parts.

14

REPLACEMENT PARTS

Rev. 6/20

SA7008 3-PERSON SAUNA WITH 8 CARBON HEATERS

REF.#		PART NUMBER	QTY.	CARTON
1	FRONT GLASS DOOR RIGHT SIDE PANEL FRONT RIGHT PANEL BACK PANEL LEFT SIDE PANEL ROOF ROOF COVER FLOOR FLOOR HEATER COVER BENCH SEAT BENCH SUPPORT WITH HEATER PANEL DOOR HANDLE	SAP7023	1	Α
2	RIGHT SIDE PANEL	SAP7024	1	В
3	FRONT RIGHT PANEL	SAP7025	1	В
4 5 6 7	BACK PANEL	SAP7026	1	Α
5	LEFT SIDE PANEL	SAP7027	1	A
6	ROOF	SAP7028	1	C
	ROOF COVER	SAP7029	1	C
8 9*	FLOOR HEATER COVER	SAP70301 SAP7031	1 1	C
10	RENCH SEAT	SAP7031 SAP7032	1	CCCCACCCCACC
11	BENCH SUPPORT WITH HEATER PANEL	SAP7033	1	Ĉ
12	DOOR HANDLE	SAP7034	1 1	Č
13	TOWEL HOOK	SAP2460	1	Č
14	BACKREST	SAP7035	2	Č
15*	TOUCH SCREEN CONTROL PANEL	SAP7036	1	Α
16*	MOOD LIGHTING	SAP7037	1 SET	С
17	MOOD LIGHTING REMOTE	SAP2816	1	
18	OXYGEN IONIZER	SAP2409	1	С
19	2" (50MM) SCREW	SAP7038	2	C
19	1-1/2" (40MM) SCREW	SAP7038	6	C
19	1-1/8"" (30MM) SCREW	SAP7038	13	C
19	2-3/8" (60MM) SCREW (FOR DOOR)	SAP7038	2	C
19	3/4" (20MM) SCREW	SAP7038	16	C
19 19	5/8" (16MM) SCREW BLACK PLASTIC WASHER & METAL CAP	SAP7038 SAP7038	2 4 SETS	C
20	SIDE WALL GLASS	SAP7030 SAP7039	1	CCCCCCCA
21*	330W HEATER ELEMENT – LFT, RGT, FRNT & BACK WALI			Ä
22*	225W HEATER ELEMENT – BENCH & FLOOR	SAP2421	6 2 2 2	Ċ
24*	GLASS CLIP - METAL	SAP2537	2	Ä
25*	DOOR MAGNET	SAP25371	2	Α
26*	DOOR HINGE	SAP24154	2	Α
27A*	OUTER BUCKLE	SAP2607		
27B*	INNER WALL CONNECTORS	SAP7040		,
28*	INTERIOR LIGHT FIXTURE	SAP2604	1	C
29*	COLOR THERAPY LIGHT	SAP24101	1	•
30* 31*	VENTILATION COVER SPEAKER	SAP2817 SAP2416	2	C
32*	POWER SUPPLY BOX – 12.5A	SAP7022	1	CCCCCACCCA
33*	POWER SUPPLY RECEPTACLE	SAP24073	1	C
34*	HEATER CIRCUIT BOARD	SAP2826	i	Č
35*	MAIN POWER CABLE	SAP2704	1	Ä
36*	25 AMP OVERCURRENT PROTECTOR	SAP2530	1	С
37*	ANTENNA	SAP7042	1	С
38*	THERMOSTAT WIRE	SAP25314	1	Ç
39*	WOODEN POWER CABLE COVER	SAP3128	1	A
40*	COLOR THERAPY CONTROL PANEL WIRE	SAP2532	1	C
41* 42*	CONTROL PANEL FUSE	SAP2822	1	A
42* 43*	CONTROL PANEL FUSE CIRCUIT BOARD TO POWER SUPPLY BOX WIRE	SAP2823 SAP2824	1	A C
43 44*	STAR LIGHT	SAP2024 SAP7043	1 SET	C
45*	STAR LIGHT CONTROL	SAP7044	1	Č
		0, 11 , 0 1 1	•	_

^{*} These items are pre-installed in your sauna

REPLACEMENT PARTS

Rev. 6/20

SA7009 4-PERSON SAUNA WITH 9 CARBON HEATERS

REF.#	DESCRIPTION	PART NUMBER	QTY.	CARTON
1	FRONT GLASS DOOR	SAP7023	1	Α
2	RIGHT SIDE PANEL	SAP7045	1	В
3	FRONT RIGHT PANEL	SAP7046	1	В
4	BACK PANEL	SAP7047	1	A
5 6 7	LEFT SIDE PANEL	SAP7048	1	A
7	ROOF ROOF COVER	SAP7049 SAP7050	1	\mathcal{C}
8	FLOOR	SAP70511	1	C
9*	FLOOR HEATER COVER	SAP7052	i	č
10	BENCH SEAT	SAP7053	1	ACCCCACCCCACC
11	BENCH SUPPORT WITH HEATER PANEL	SAP7054	1	С
12	DOOR HANDLE	SAP7034	1	C
13	TOWEL HOOK	SAP2460	1	C
14	BACKREST TOUGH SONED BANEL	SAP7035	2	Ç
15* 16*	TOUCH SCREEN CONTROL PANEL	SAP7036	1 1 SET	A
17	MOOD LIGHTING MOOD LIGHTING REMOTE	SAP7055 SAP2816	1 3 5 1	\mathcal{C}
18	OXYGEN IONIZER	SAP2409	1	
19	2" (50MM) SCREW	SAP2409 SAP7038	2	C
19	1-1/2" (40MM) SCREW	SAP7038	2	C
19	1-1/8"" (30MM) SCREW	SAP7038	13	č
19	2-3/8" (60MM) SCREW (FOR DOOR)	SAP7038	2	Č
19	3/4" (20MM) SCREW	SAP7038	18	С
19	5/8" (16MM) SCREW	SAP7038	2	C
19	BLACK PLASTIC WASHER & METAL CAP	SAP7038	4 SETS	CCCCCCCA
20	SIDE WALL GLASS	SAP7039	1	
21* 22*	330W HEATER ELEMENT – LFT, RGT, FRNT & BACK WALL 225W HEATER ELEMENT – BENCH & FLOOR	LS SAP2418 SAP2421	6 2	A
22 23*	80W HEATER ELEMENT – BENCH & FLOOR	SAP2421 SAP2420	1	C
23 24*	GLASS CLIP - METAL	SAP2537	2	A
25*	DOOR MAGNET	SAP25371	2	Ä
26*	DOOR HINGE	SAP24154	2	A
27A*	OUTER BUCKLE	SAP2607	3 PAIRS	A,B
27B*	INNER WALL CONNECTORS	SAP7040	3 PAIRS	
28*	INTERIOR LIGHT FIXTURE	SAP2604	1	C
29*	COLOR THERAPY LIGHT	SAP24101	1	C
30* 31*	VENTILATION COVER	SAP2817 SAP2416	1 2	C
31*	SPEAKER POWER SUPPLY BOX – 12.5A	SAP2416 SAP7022	<u> </u>	CCCCCCACCCA
33	POWER SUPPLY RECEPTACLE	SAP24073	1	Č
34*	HEATER CIRCUIT BOARD	SAP2826	1	Č
35*	MAIN POWER CABLE	SAP2704	1	Ä
36*	25 AMP OVERCURRENT PROTECTOR	SAP2530	1	С
37*	ANTENNA	SAP7042	1	С
38*	THERMOSTAT WIRE	SAP25314	1	Ç
39*	WOODEN POWER CABLE COVER	SAP3128	1	A
40*	COLOR THERAPY CONTROL PANEL WIRE	SAP2532	1	C
41* 42*	CONTROL PANEL WIRING HARNESS CONTROL PANEL FUSE	SAP2822 SAP2823	1	A
42 43*	CIRCUIT BOARD TO POWER SUPPLY BOX WIRE	SAP2823 SAP2824	1	C
44*	STAR LIGHT	SAP7043	1 SET	A C C C
45*	STAR LIGHT CONTROL	SAP7044	1	Č

^{*} These items are pre-installed in your sauna

SAUNA WARRANTY REGISTRATION CARD

- 1. This sauna has a 7-Year Limited Warranty against defects in materials and workmanship from date of purchase. To receive the warranty, the card below must be filled out completely and returned within thirty (30) days from date of purchase. This 7-Year Limited Warranty covers the wood structure*. Heating elements and all electronics are covered by a 5-Year Limited Warranty. The radio/CD player (if included with your sauna) is covered by a limited 1-Year Warranty. The light fixtures are covered for 90 days.
- 2. This product is intended to be utilized for **private**, **non-commercial use**. Blue Wave Products sauna must be used as directed in the Product Operation Manual. Utilization of **non**-Blue Wave replacement parts or repairs which are not done by or under the direction of Blue Wave Products, Inc. shall also void any warranties/guarantees, expressed or implied.
- 3. This warranty does **not** cover defects or damage due to improper installation, alteration, accident, installation of unauthorized parts or any other event beyond the control of the Blue Wave Products. Defects or damage resulting from misuse, abuse or negligence will void this warranty. This warranty does **not** cover scratching or damage that may result from normal usage.
- 4. Please notify Blue Wave Products in advance of any sauna warranty claim prior to shipping the sauna back. Contact our warranty claim department at warranty@splashnetxpress.com. This warranty becomes valid at time of purchase and terminates either by specified time frame listed above, owner transfer, or relocation.
- 5. This warranty is nontransferable and is expressly limited to the repair or replacement of the defective product. During the warranty period, Blue Wave Products shall repair or replace defective parts at no cost to the purchaser. Shipping charges and insurance are **not** covered and are the responsibility of the purchaser. Labor charges and related expenses for removal, installation or replacement of the product or components are **not** covered under this warranty.
- 6. If the warranty claim department determines that the item must be returned, it must be returned with freight prepaid and a receipt showing date of purchase, purchase price, and the dealer from which the sauna was purchased. **No warranty claim will be honored without a receipt.**
- 7. Warranty claims will only be resolved with the repair of the current product, or shipment of a replacement product or parts at the sole discretion of Blue Wave Products. NO REFUNDS will be given.
- 8. Blue Wave Products reserves the right to make substitutions to warranty claims if parts are unavailable or obsolete.
- 9. Blue Wave Products shall **not** be liable for loss of use of the product or other consequential or incidental costs, expenses or damages incurred by the consumer of any other use. The user assumes all risk of injury resulting from the use of this product.
- 10. Improper installation, misuse or damages resulting from acts of nature will render this warranty null and void.
- 11. This warranty is in lieu of all other warranties expressed or implied and no responsibility is assumed for future damage due to misuse. This sauna is intended for INDOOR USE ONLY—outdoor installation of the sauna WILL VOID THE WARRANTY. Additional actions that will void the warranty are: Use of lacquer or paints on any part of the sauna, placing sauna on non-approved surface, and outdoor applications.
- *Surface cracks are NOT considered defects in material or workmanship, as they are normal characteristics of all wood. This includes minor cracks due to wood expansion and contraction. Note: since the wood used in construction has been kiln dried, a certain amount of expansion and contraction is expected in the wood within a sauna environment. Also, over time the sauna wood may darken or change color tones. This color change is considered normal aging and is not covered under warranty.

To send in this warranty card: Fill out below, detach and mail to the following address:

BLUE WAVE PRODUCTS 1745 Wallace Ave. Suite B St. Charles, IL 60174 For further warranty information or inquiries, please call 800-759-0977

	St. Charles, IL 60174	Detach Here
	SAUNA WARRANTY REGISTRATION FORM	
Date Purchased:/	/	
Name:		
	Email:	
Purchased from:		
Item Number:	Purchase Price:	