




EMOTION WOOD

Seamless Inside / Outside Corners

Step 1: Mark Board

Use a carpenter's square and pencil to mark two 45-degree angles.

Note: Image shown for Outside corner, reverse cuts for inside corner installation.

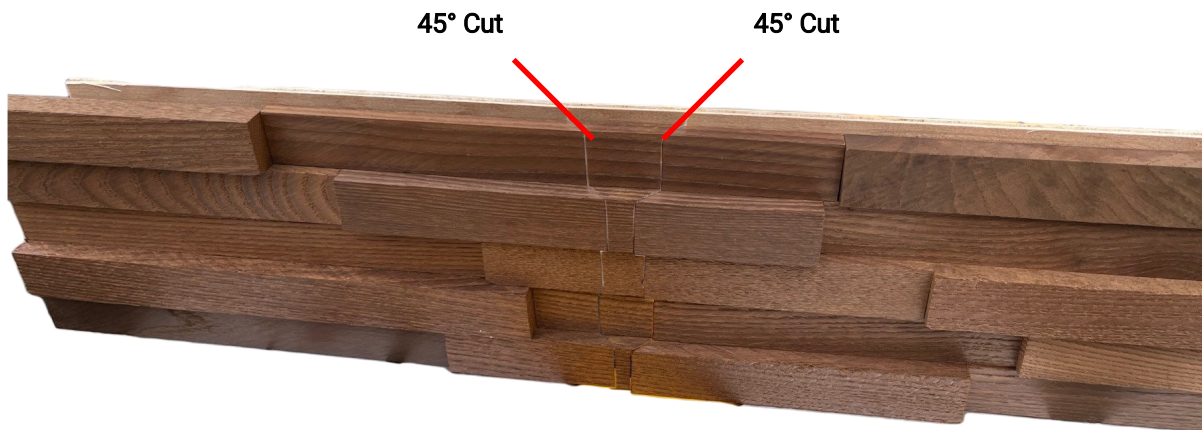

Step 2: Cut Boards

Using a Miter Saw make cuts at marked lines.



Seamless Inside / Outside Corners

Step 3: Install Cut pieces

Take cut pieces in install onto wall. Follow same installation instructions provided with panel.



EMOTION
WOOD